

Three-way Calling

Allows you to add a third party to your existing conversation. Three-way Calling can be used whether you have received or placed the first call.

- With the first person on the line, press and release the receiver button (or FLASH button) to place the call on "hold". You will hear three beeps, then dial tone.
- Dial the third person's number. You can talk privately to the third party before including the caller who is on hold.
- To begin the three-way call, press and release the receiver button (or FLASH). All three parties will be on the line. (If the line is busy or there is no answer, you can return to the original call by pressing and releasing the receiver button (or FLASH) twice.

If the original party hangs up, you can add another third party by repeating steps above. To disconnect the third party, press the receiver button (or FLASH) twice. Your line is then free to add a different third party by repeating steps above. All parties are disconnected when you hang up.