



No.	Button	Use
1	SETUP	Use SETUP for all programming sequences.
2	MUTE	Press MUTE once to turn sound off or on.
3	LAST	Press LAST once to recall the last channel watched.
4	VOL + and VOL -	Use VOL + or - to raise or lower the sound volume.
5	GUIDE	Use GUIDE to display the program guide.
6	CURSOR keys	Use CURSOR keys to move the cursor in the program guide.
7	SELECT/OK	Use SELECT to choose options, PPV events, and to tune programs from the program guide.
8	INFO	Use INFO to display current channel and program information.
9	REW, Play, FF, Rec, Stop, Pause	(Slide down panel to reveal) In the VCR and PVR modes, use the REW, PLAY FF, REC, STOP, and PAUSE keys to control the program. Press REC twice to record a program.
10	LED	The LED (red light) blinks to show the remote is working and is sending signals.
11	POWER	Press POWER once to turn on or off the selected home entertainment component.
12	AUDIO, VCR, TV, and CABLE	Press AUDIO, VCR, TV, or CBL to select a home entertainment component to control.
13	KEYPAD	Use the KEYPAD (0-9) to directly select channels.
14	ENTER	Press ENTER once after entering channel numbers on some TV models.
14	MENU	Press MENU once to display screen menu.
15	CH+ and CH-	Use CH+ or - to select the next higher or lower channel.
18	FAV/LOCK	Not used at this time.
19	EXIT	Use EXIT to exit out of your cable converter's menu & guide.
20	PAGE + and PG -	Use PAGE + & - to page up or down on menu screen & program guide.
21	IN-TUNE KEYS	Program each "TUNE-IN" key to remember three of your favorite channels for a total of nine channels.



TROUBLESHOOTING

If remote is not working:

Press the key for the function you are using (example: Press the TV button) and try again.
 Make sure the Set Top Box is plugged in, and there is a clear path between the remote and the Set Top Box.
 Check and make sure the batteries in the remote control are not weak or dead.

For TV problems:

Make sure all components and cables are properly connected and plugged in.
 Press the TV button, then press the POWER button on your remote.
 Make sure TV is tuned to the proper output channel (cable = 3, or a video input if using yellow/red/white cables).

If Set Top Box does not work:

Press the CBL button on the remote, then press the POWER button. (Be sure to press the TV button on the remote after testing - so the remote will control the TV).